

## Installation Manual

### AQUA-10

Date: 05/2018

BLACK		WHITE		Beam Angle	CCT	
Variant	Item No.	Variant	Item No.			
21202	AQUA-10-RND-BLK	21218	AQUA-10-RND-WHT	60°	2700K	10W Round LED Downlight
21206		21222		60°	3000K	
21210		21226		60°	4000K	
21214		21230		60°	5000K	


Thank you for purchasing your new LED AQUA, Please take the time to read and understand the instruction sheet below. Failure to do so may void warranty.

### Specifications

Voltage:	240V	Lumen (±5%):	Extra Warm White 2700K - 840lm Warm White 3000K - 870lm Neutral White 4000K - 980lm White 5000K - 930lm	Dimmable:	Yes*
Power:	10W	Beam Angle:	60°	Operating Temp:	-20°C~45°C
IP Rating:	65	CCT:	2700K - 3000K - 4000K - 5000K	Power Factor:	≥0.9
CRI:	≥80	Lifespan:	50,000hrs	Cutout:	Ø75-80mm



\* Tested on the Domus dimmer series. May work on others but not tested.

#### Minimum clearance distances to flammable building elements.

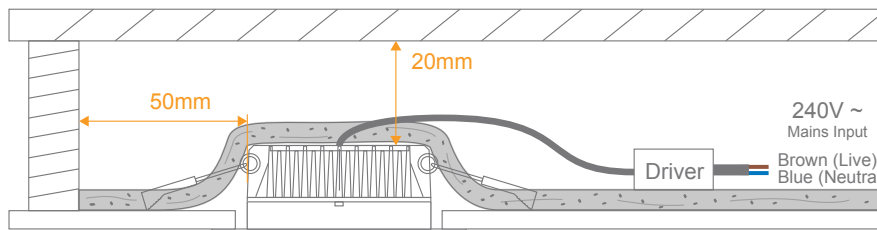


#### Note:

 
- The LED driver is NOT suitable for covering with insulation material.
- Warning-Risk of overheating or fire if the clearance distances are compromised.
- If the external flexible cable is damaged, it needs to be replaced by the manufacturer or his service agent.
- The light source of this luminaire is not replaceable; at the end of life the whole luminaire should be replaced.

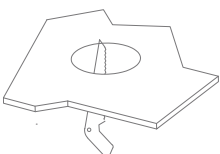


1. Open a hole according to the cutout size of led downlight.

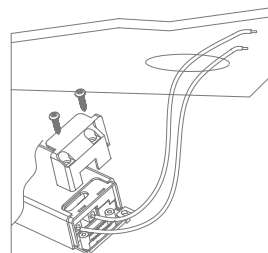

2. Use screw-driver to open the driver terminal cover, feed the main AC wire L.N. in terminal block respectively, then fix the cover back.

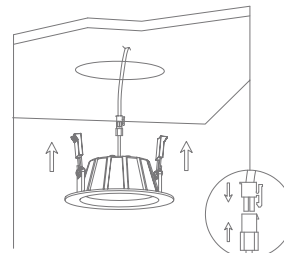

3. Connect the downlight with driver, hold back the spring clip then push the downlight into the hole.

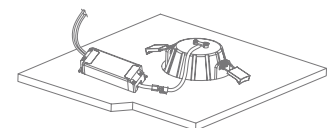

4. Make sure the downlight fixed tightly in ceiling, turn on the power.

**Note:** -The lamp must be installed by professional electrician  
-Ensure the power supply is switched off before fitting this product

-Do not touch the lamp when in use  
-Keep away from hot steam and corrosive gas