

29-31 Richland St. Kingsgrove. Sydney NSW 2208 Australia

Phone: 02 9554 9600 | Fax: 02 9554 9433

enquiries@domuslighting.com | www.domuslighting.com

Installation Manual

Date:04/2018 **SPLASH TRIO**

Variant	Iten No.	Description
20436	SPLASH-RND-W-TRIO	Satin White 13W Downlight, TRIO
20438	SPLASH-SQR-W-TRIO	Satin White 13W Downlight, TRIO
20622	SPLASH-RND-B-TRIO	Black 13W Downlight, TRIO
20623	SPLASH-SQR-B-TRIO	Black 13W Downlight, TRIO

Thank you for purchasing your new LED SPLASH, Please take the time to read and understand the instruction sheet below. Failure to do so may void warranty.


Specifications

Voltage:	240V AC	Lumen (±5%):	WW 3000K - 800lm NW 4000K - 850lm W 5700K - 900lm	Dimmable:	Yes (Domus dimmer series)	
Power:	13W	Beam Angle:	90°	Lifespan:	50,000hrs	
IP Rating:	54	CCT:	3000K - 4000K - 5700K (Switchable)	CRI:	≥80	

How to install:

- The LED downlight shall be installed in accordance to Australian/NZ electrical standards.
- The LED downlight shall be installed in locations and in conditions as described in the below figure.
- Please make sure all electricity is switched off at the main switch board before any electrical works are to
- Cut out the hole according to the downlight cutout table.
- The LED driver is supplied with an Australian approved 2pin flex and plug.
- For easy maintenance Domus recommends the use of plug base sockets in the ceiling.
- If you are intending to hard wire the LED drivers please remove the supplied flex and plug from the LED
- When connecting the LED lamp/down light to the LED driver please ensure the connecting plug is securely pushed in and the connection is not loose.

Minimum clearance distances to flammable building elements.

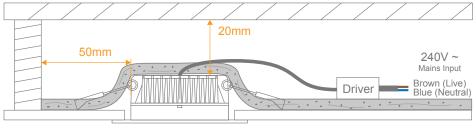



Note:

- The LED driver is NOT suitable for covering with insulation material.
- Warning-Risk of overheating or fire if the clearance distances are compromised.
- If the external flexible cable is damaged, it needs to be replaced by the manufacturer or his service agent.
- The light source of this luminaire is not replaceable; at the end of life the whole luminaire should be replaced.

Note: -The lamp must be installed by professional electrician

- -Ensure the power supply is switched off before fitting this product
- -Do not touch the lamp when in use
- -Keep away from hot steam and corrosive gas