

29-31 Richland St. Kingsgrove. Sydney NSW 2208 Australia

Phone: 02 9554 9600 | Fax: 02 9554 9433

enquiries@domuslighting.com | www.domuslighting.com

Date: 09/2018

Installation Manual

ZEKE-9-SOUARE

Order Code	Product Code	Description			
19516	ZEKE-9-SQR-BLK-WW	Black, Square Exterior Wall Light, 3000K Warm White			
19517	ZEKE-9-SQR-BLK-W	Black, Square Exterior Wall Light, 5000K White			
19490	ZEKE-9-SQR-SLR-WW	Silver, Square Exterior Wall Light, 3000K Warm White			
19491	ZEKE-9-SQR-SLR-W	Silver, Square Exterior Wall Light, 5000K White			
19492	ZEKE-9-SQR-DGR-WW	Dark Grey, Square Exterior Wall Light, 3000K Warm White			
19493	ZEKE-9-SQR-DGR-W	Dark Grey, Square Exterior Wall Light, 5000K White			
19508	ZEKE-9-SQR-WHT-WW	White, Square Exterior Wall Light, 3000K Warm White			
19509	ZEKE-9-SQR-WHT-W	White, Square Exterior Wall Light, 5000K White			

Thank you for purchasing your new LED ZEKE-9 SQUARE, Please take the time to read and understand the instruction sheet below. Failure to do so may void warranty.


Specifications

Voltage:	240V AC	Lumen (±5%):	Warm White - 800lm White - 900lm	Dimmable:	No
Power:	9W	Beam Angle:	120°	Lifespan:	50,000hrs
IP Rating:	65	CCT:	3000K - 5000K	CRI:	≥85

Steps:

Please make a visual inspection to the fixture prior to installation. If any defect is to be found please return to you place of purchase for a replacement.

Make sure all power is correctly turned off from the mains and NOT just from the switch.

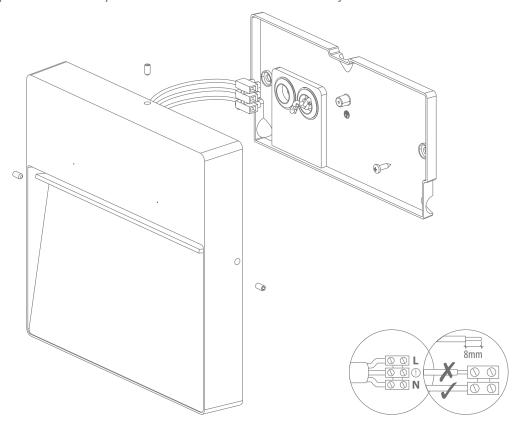

Note: -The lamp must be installed by professional electrician

-Ensure the power supply is switched off before fitting this product

- -Do not touch the lamp when in use
- -Keep away from hot steam and corrosive gas